BMW 1200GS BMW 1250GS



Remove

- Injector and Ignition cover



- Remove
 - Injector and Ignition cover




Remove

- Side Cover on Right Side




- Remove
 - Side Cover on Right Side

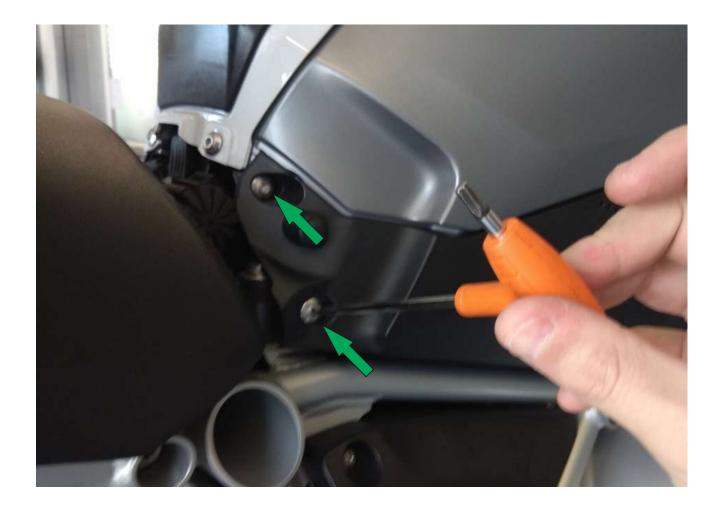


- TPS , Injection & Ignition Connect on Right side


Harness side with GND, TPS connection

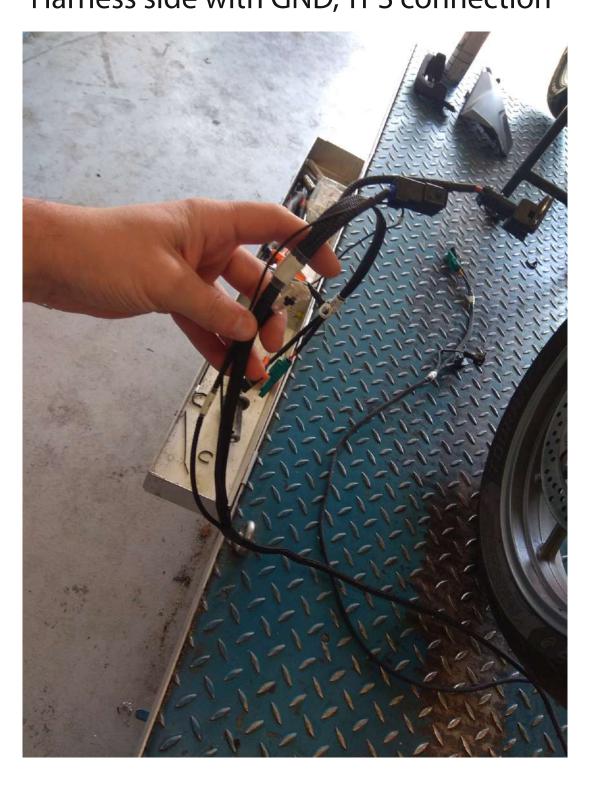


- TPS, Injection & Ignition Connect on Right side

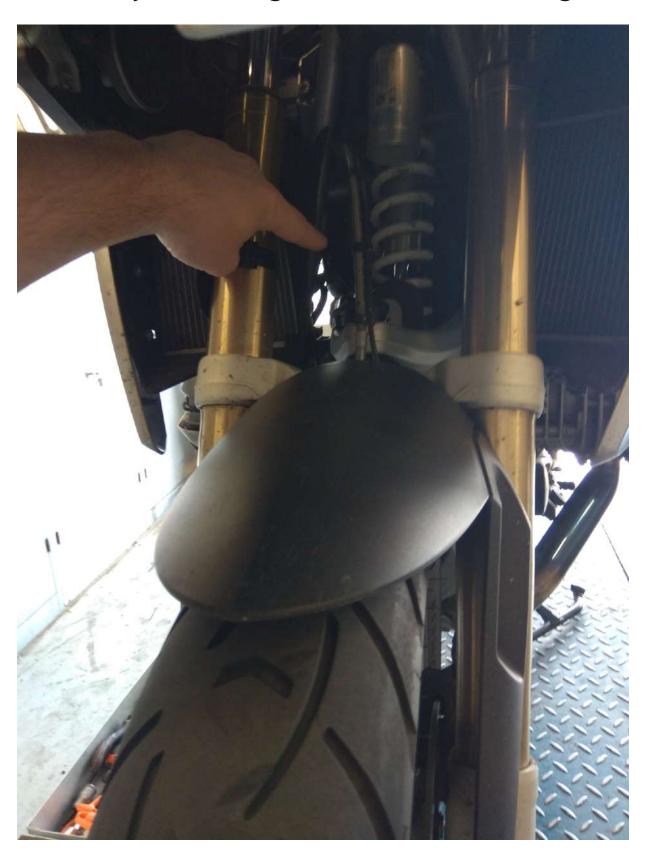

- TPS, Injection & Ignition Connect on Right side

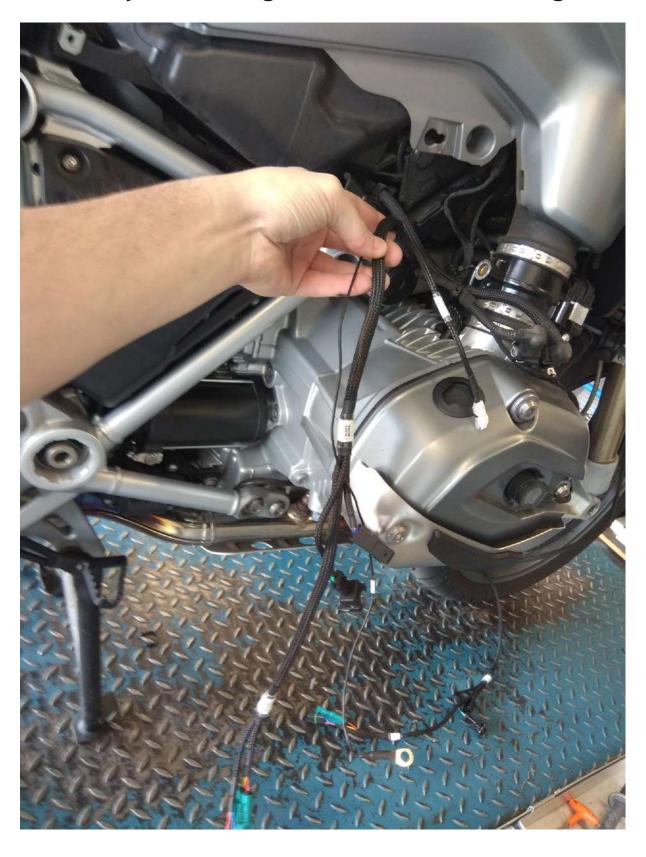


- TPS, Injection & Ignition Connect on Right side

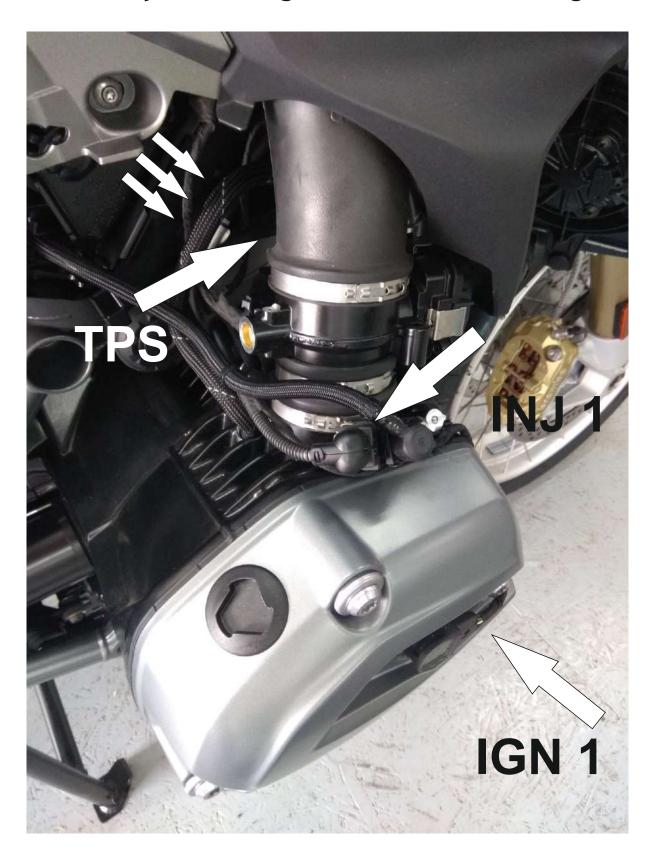

- Route Harness
 - Injection Connection



- Ignition Connection

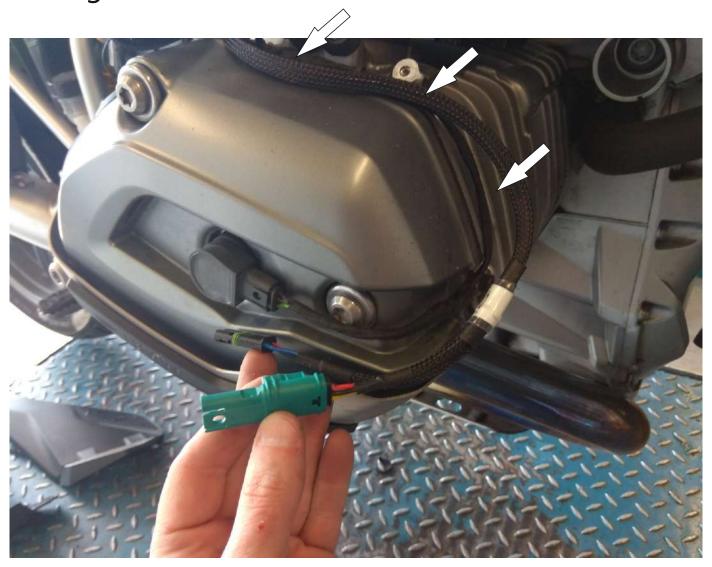

- Route Harness
 - Ignition Connection



Location of the ECU


- Front Part of the Bike




Routing of the Harness



Routing of the Harness

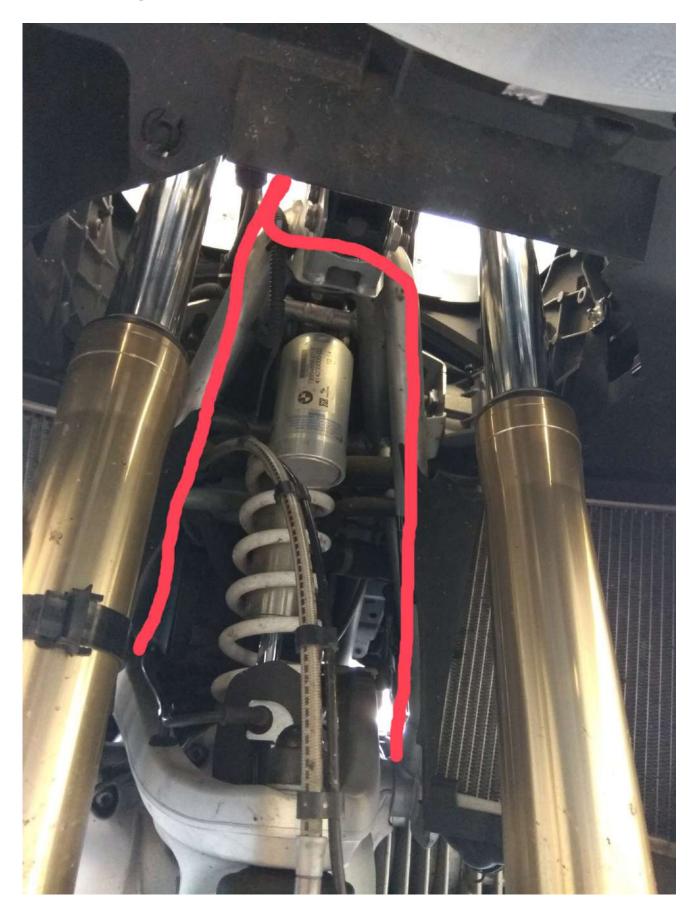


Routing of the Harness

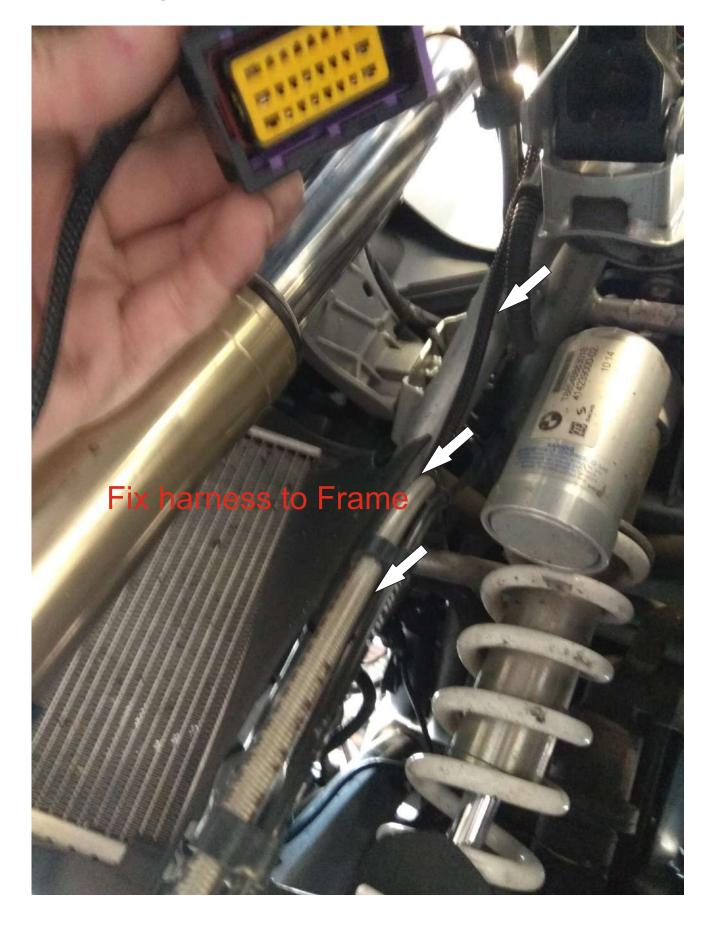


TPS

- Located on Right side. pull connector back

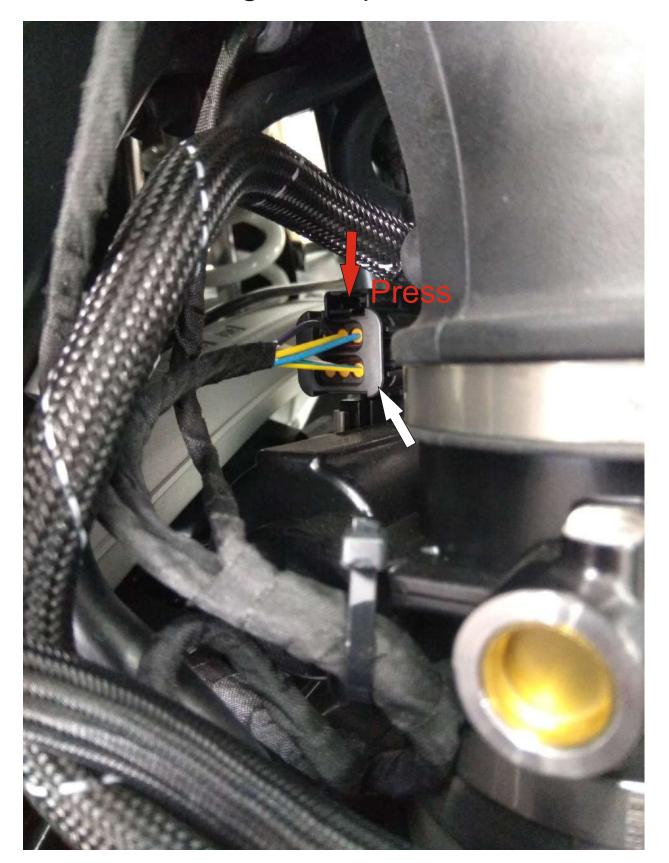

TPS SIGNAL

- BLUE Wire (click on clamp)

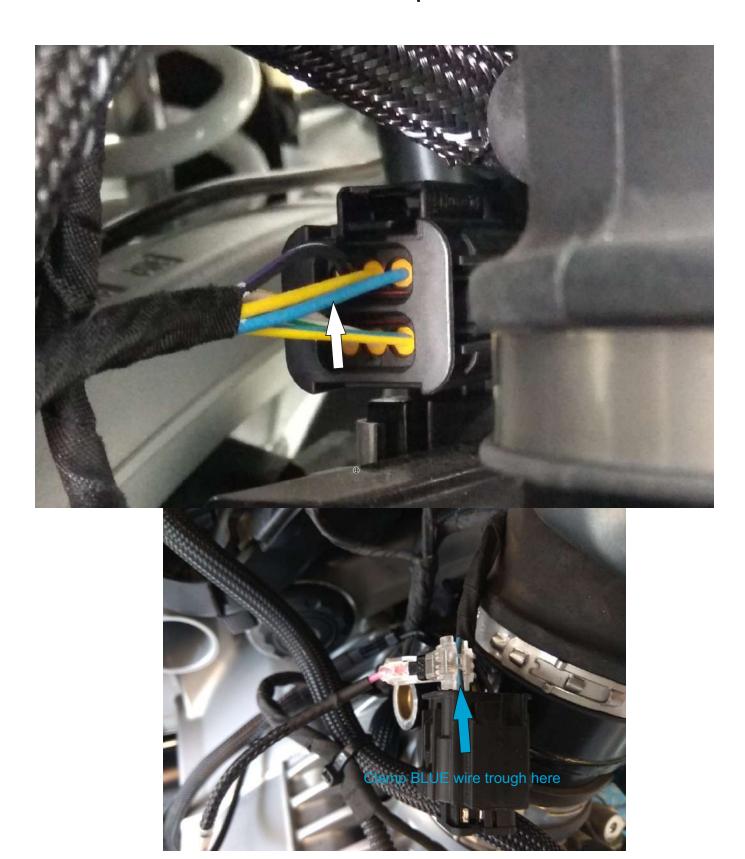


GROUND


Connect Black wire to Battery Negative



GROUND

Connect Black wire to Battery Negative

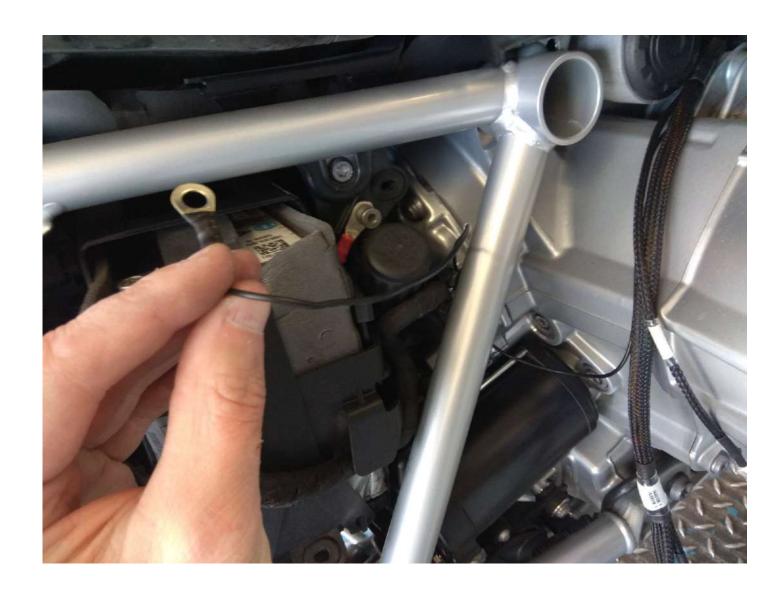

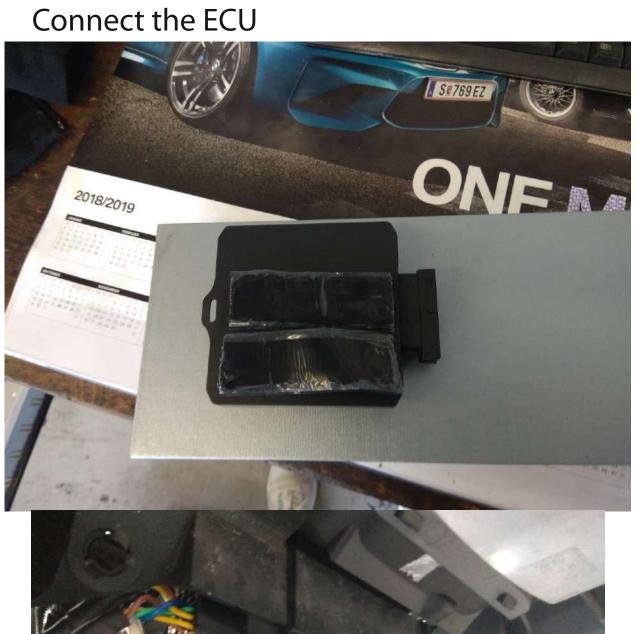



Connect the ECU

WARNING



Use Velcro Tape to fix the ECU

WARNING



Fix the Harness and Connectors with zip tie