

KTM 790 ADV 2019 -




- REMOVE SEAT, LEFT and RIGHT PLASTIC COVER




● REMOVE BATTERY COVER



● PULL OF REAR PLASTIC COVER

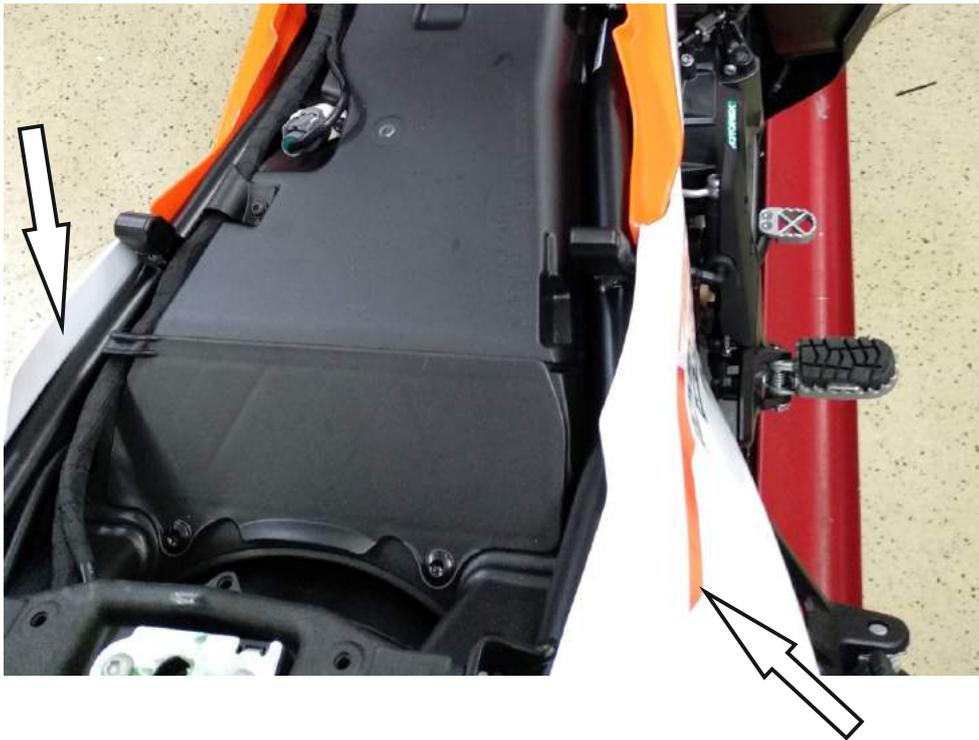

● REMOVE TANK PROTECTION

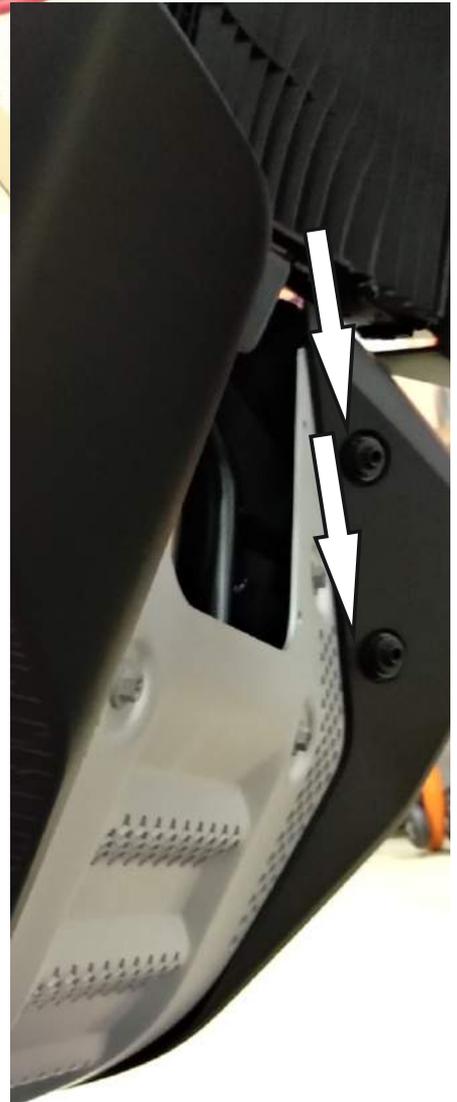

- DISCONNECT TANK AND TURN OFF VALVE (REMOVE HOSE)



- REMOVE TANK SCREW ON BOTH SIDE



- PULL OFF TANK CAP AND DISCONNECT HOSE




- UNLOCK FUEL LINE AND REMOVE GAS TANK



● INSTALL COOBER HARNESS



- **INSTALL THROTTLE BODY CONNECTOR (TPS)**

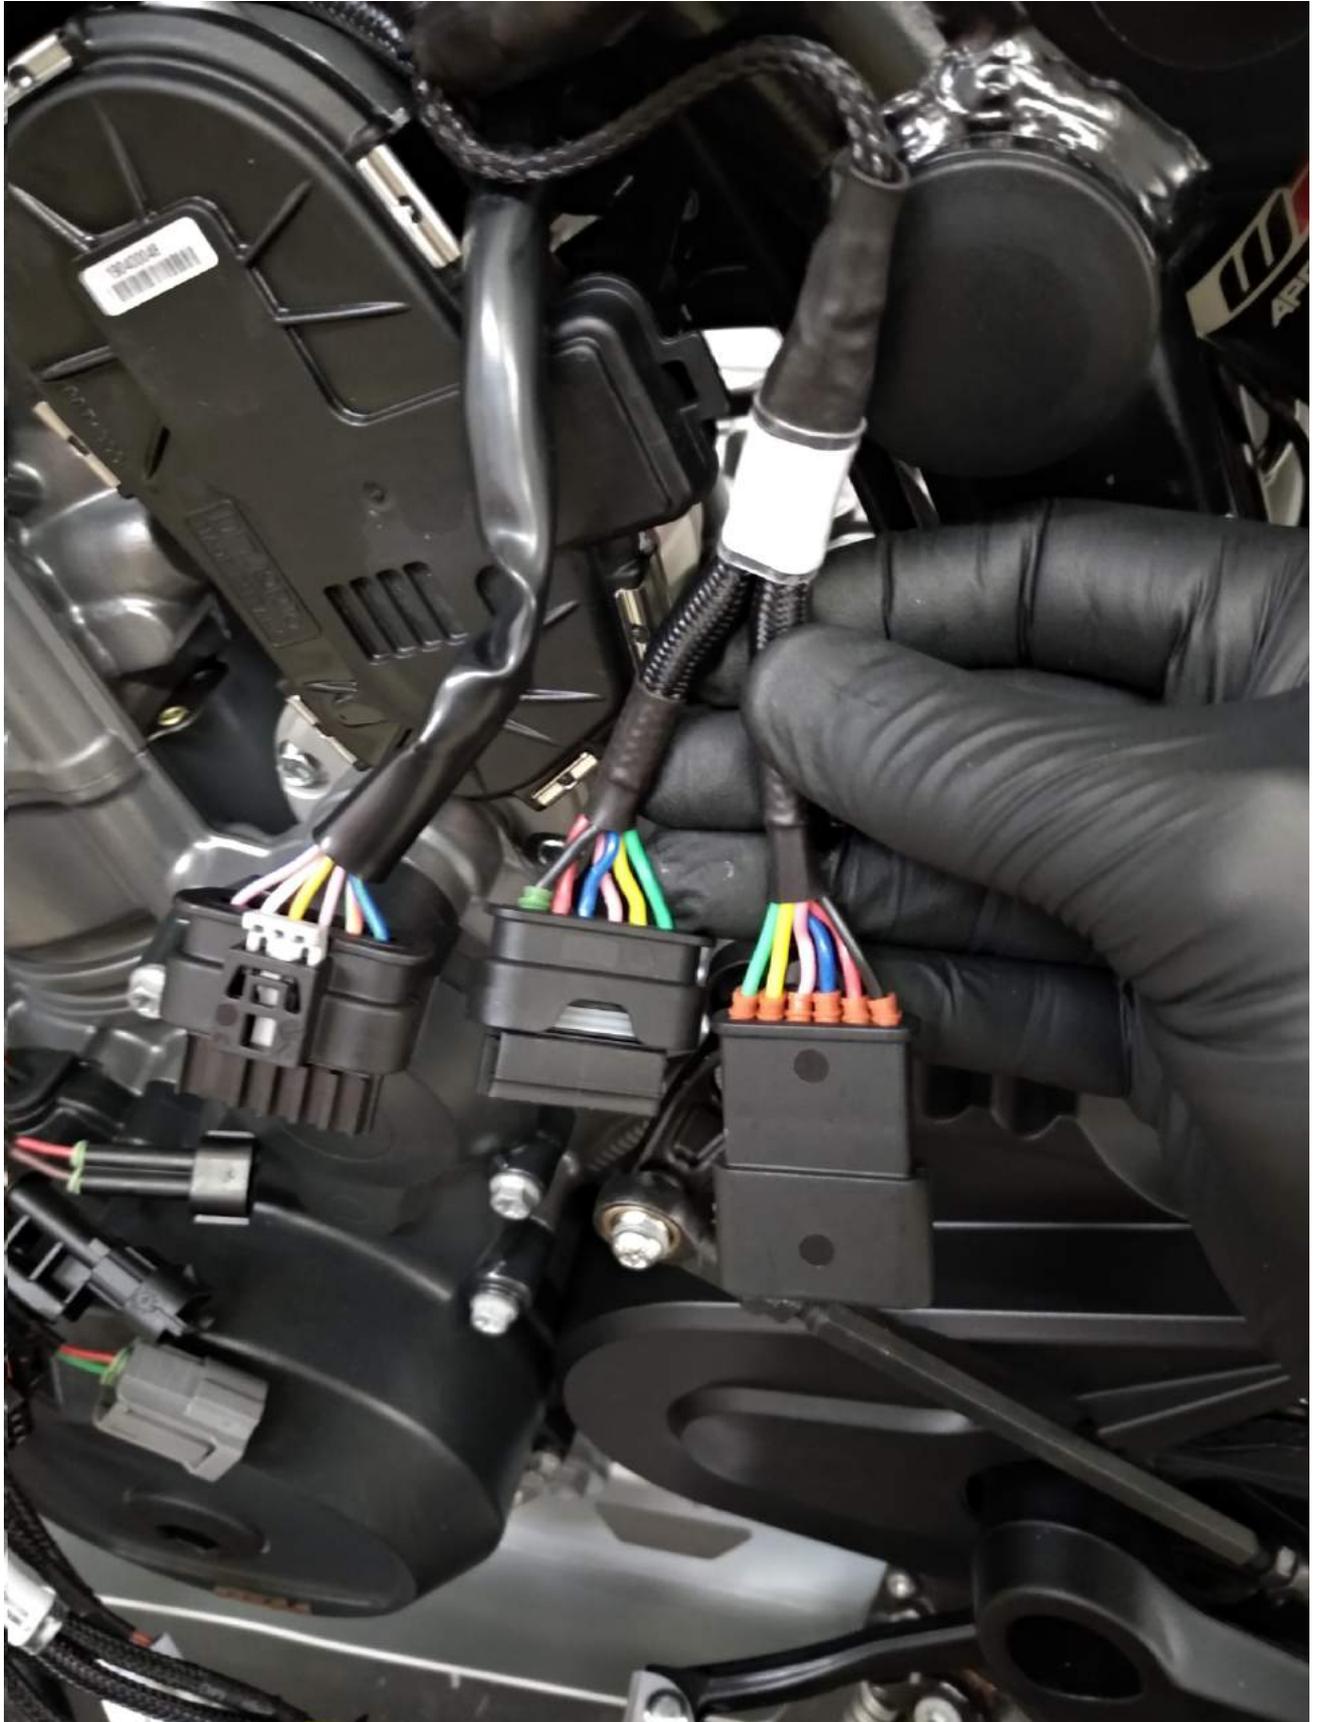


- ROUTE CYLINDER 2 INJ AND IGN TO OTHER SIDE



● CONNECT CYL 1 IGNITION AND INJECTION



● CONNECT CRANK SIGNAL

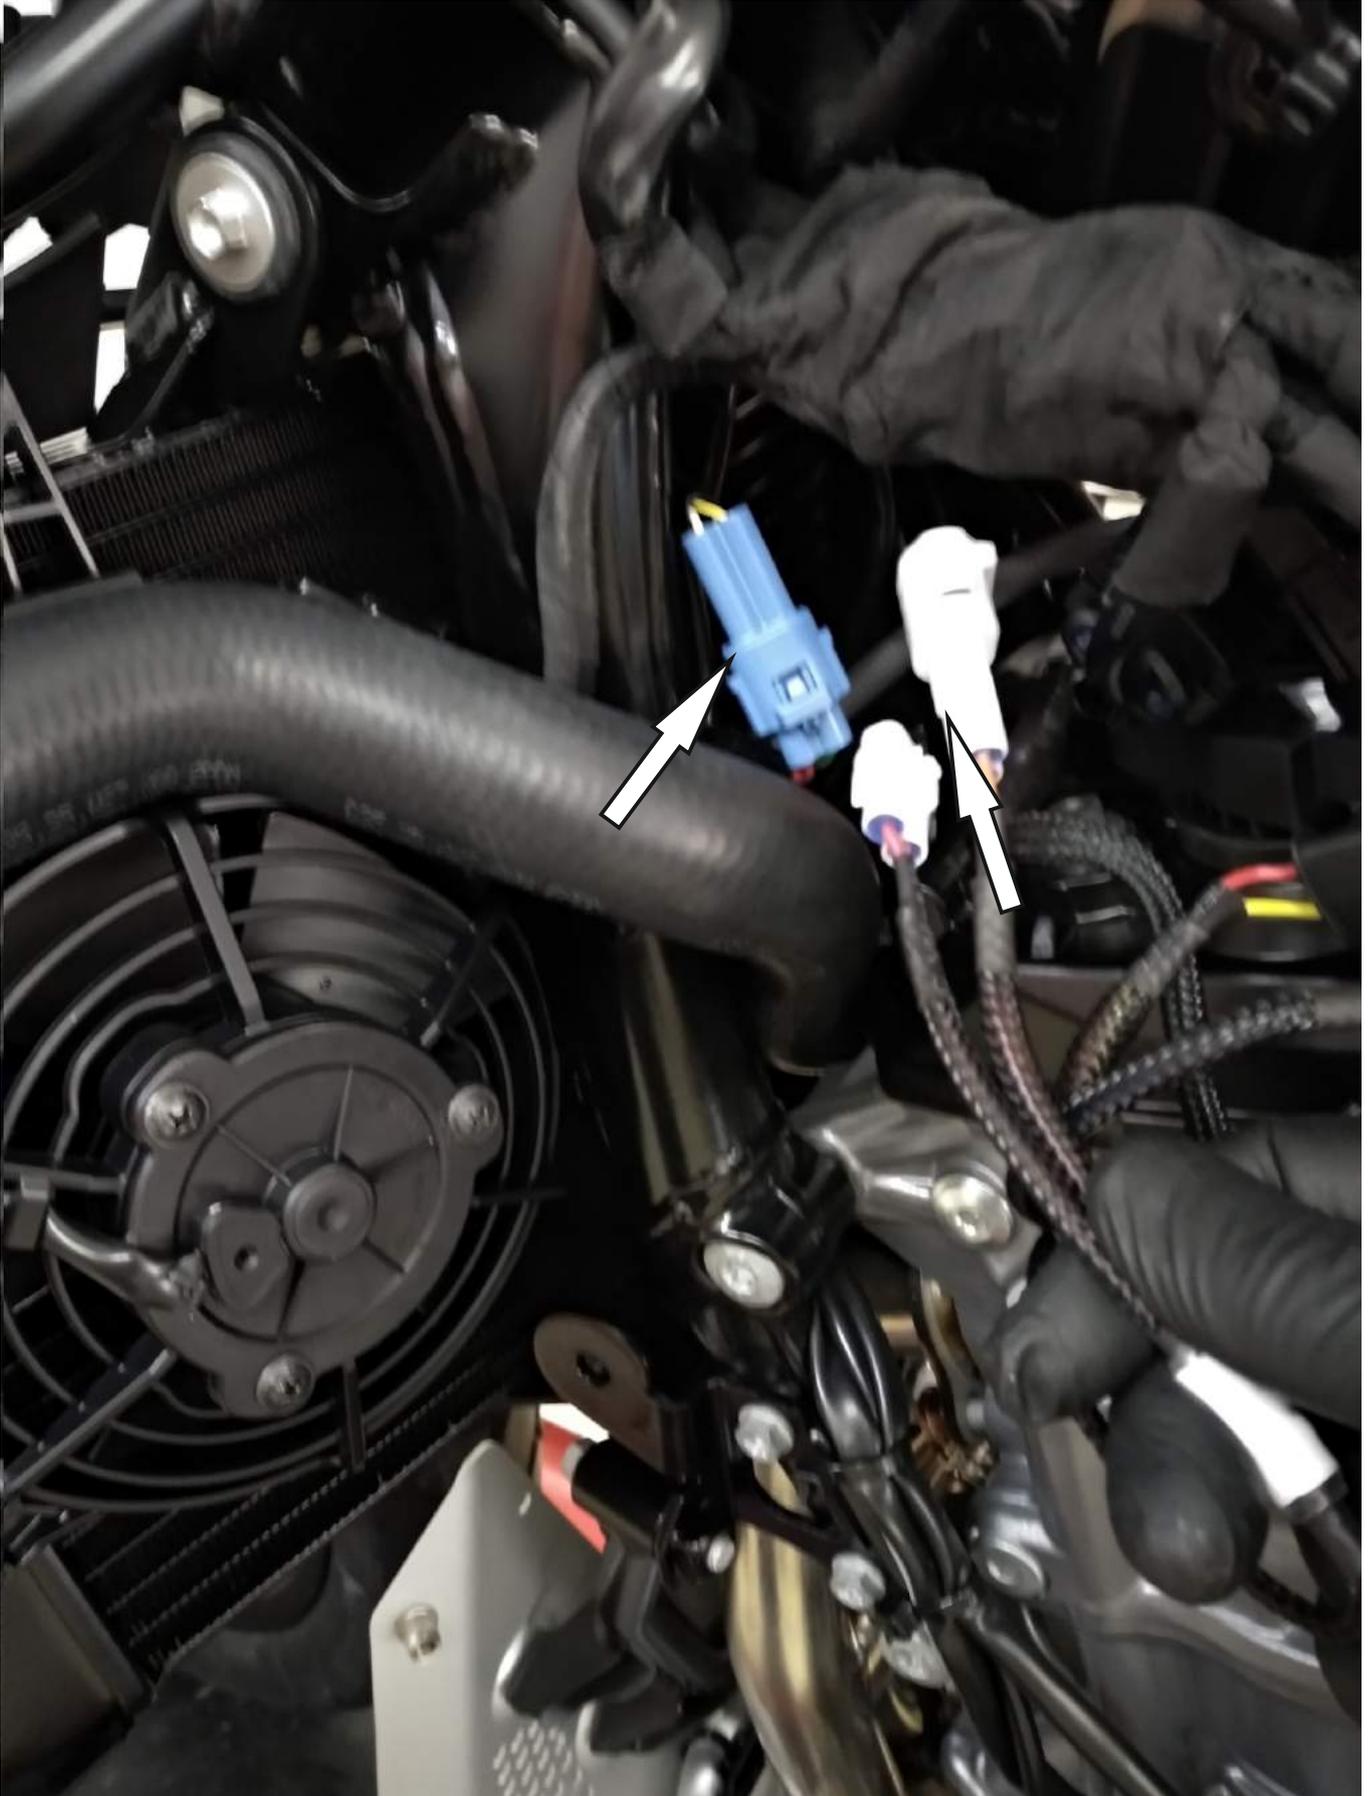


- CONNECT CYL 2 IGNITION AND INJECTION



- CONNECT CYL 2 IGNITION AND INJECTION



- CONNECT GROUND

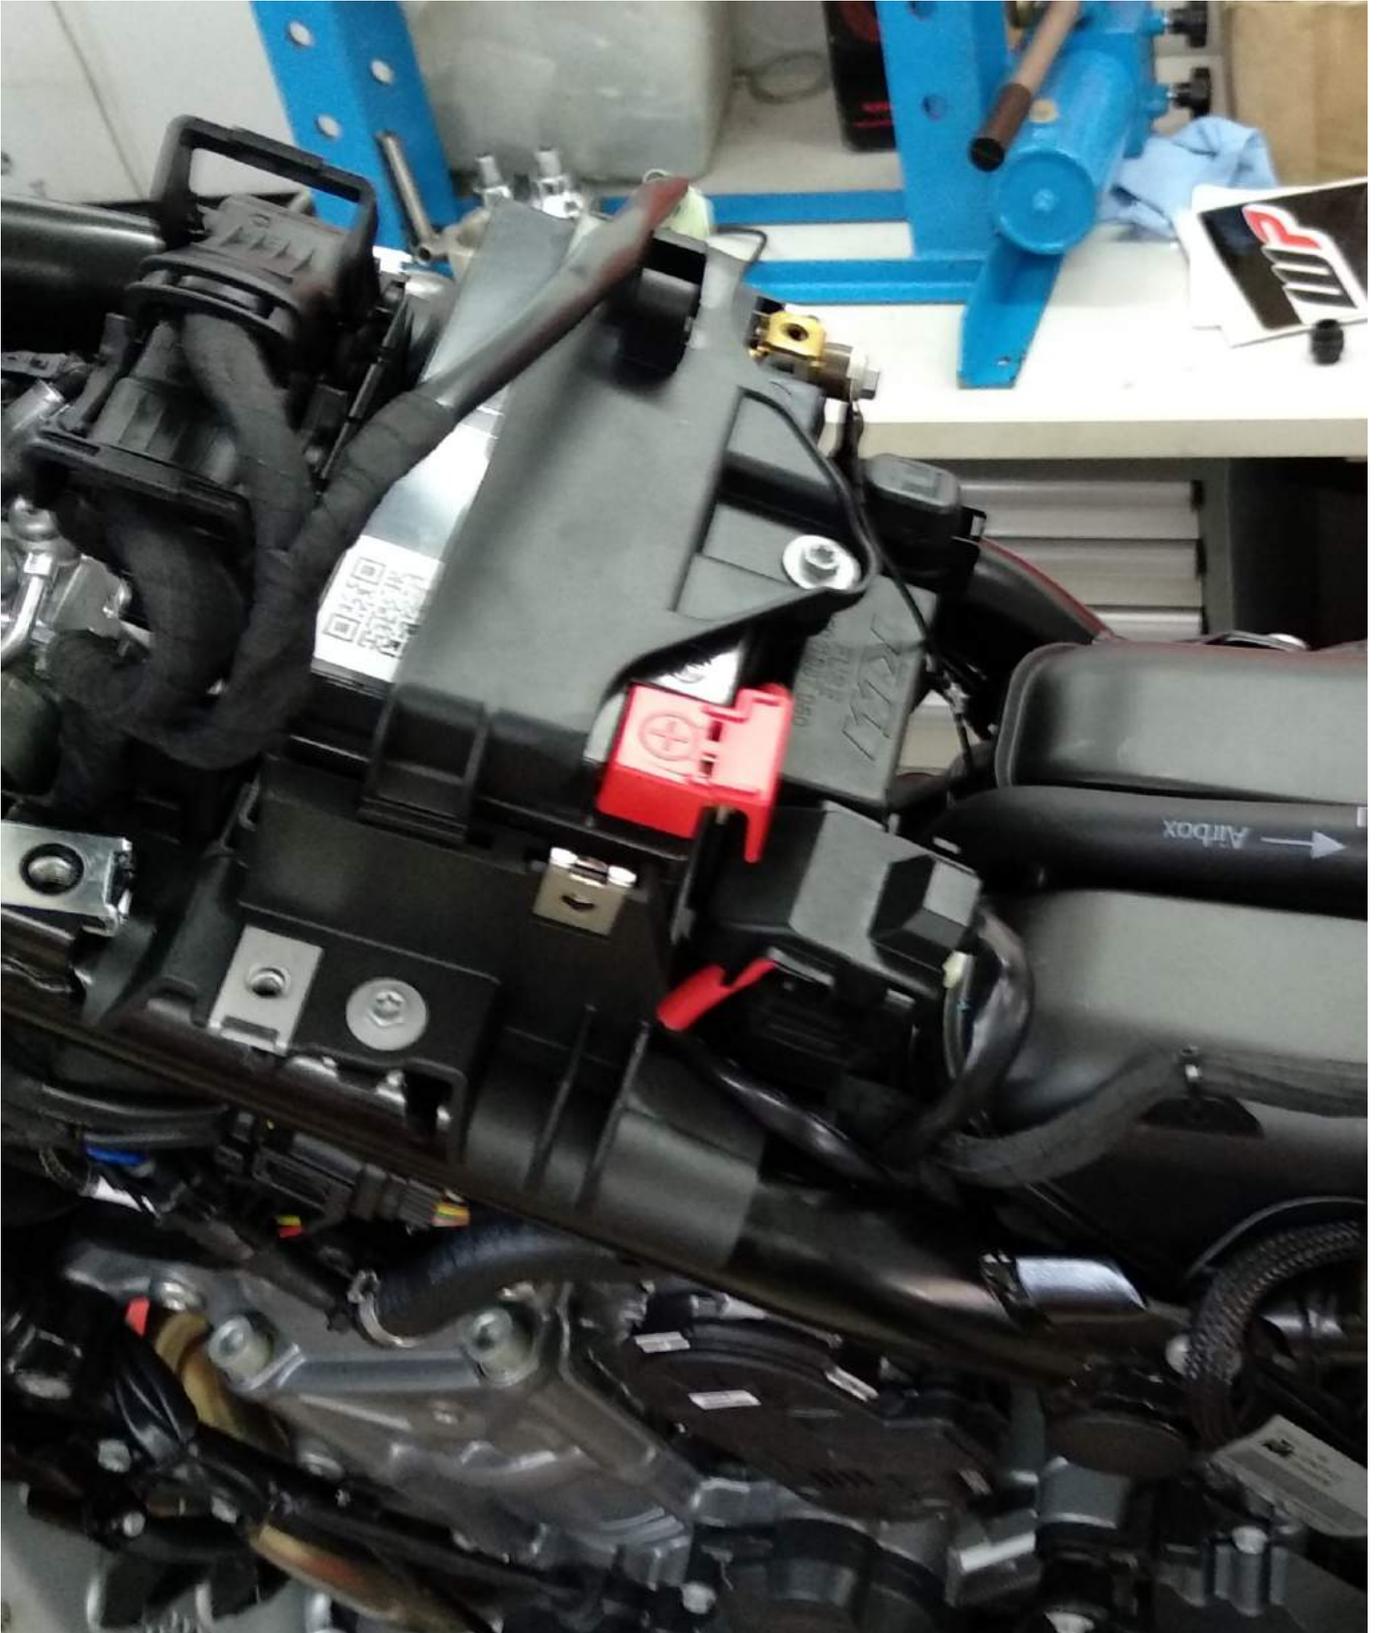

- PUT ALL THE PARTS BACK, CONNECT THE ECU, START IT, RIDE IT



WARNING / ACHTUNG



Fix the Harness and Connectors with zip tie